

EAGLE ®

P637D

Megaphone



**25W Indoor / Outdoor Megaphone
Talk / Siren Functions
Adjustable Volume
Pistol Grip/Fist Mic. Control**

IMPORTANT

Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

Inspect the product for signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- Splash proof only, do not submerge in water.
- Use only the correctly rated and type of battery.
- DO NOT mix new and used batteries as this will affect the battery life.
- Observe correct polarity when fitting batteries.
- DO NOT point directly at any person who is closer than 3.5m (10ft) from the megaphone and always adjust the volume to the conditions.


FITTING BATTERIES

To fit the batteries first release the battery compartment by pulling the catch on the side of the megaphone.



Insert 8 x C type batteries into the 2 carriers(4 in Each), observing the correct polarity, then return the carriers to the megaphone aligning the + ve and - ve terminals of the carrier with the terminals in the megaphone. Replace the cover and securely replace the catch and push closed.

OPERATION

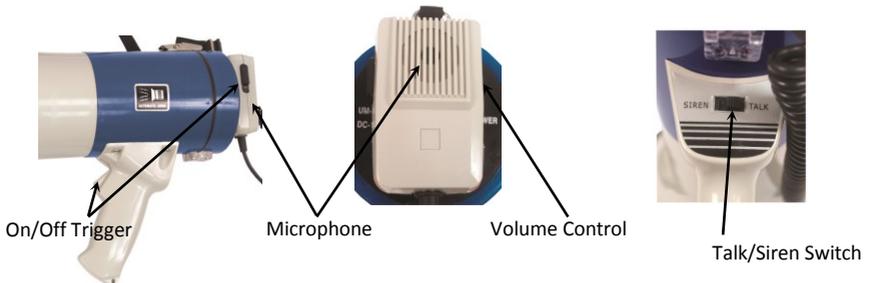

The P637B megaphone can be used as a Megaphone or Siren, before use turn the volume to its minimum position (the volume control is situated on the side of the microphone) and increase as necessary. Never start with the volume at the max level;

The megaphone can be used with the microphone fixed to the rear panel or using the first microphone separately.

1. To use as a conventional megaphone push the slide control on the rear to the Talk position. Hold the megaphone by the grip or hold the first microphone in your hand and pull the ON/OFF trigger on the handle or push the PTC (Push To Talk) button on the side of the microphone. You can now talk, adjust the volume as necessary on the microphone side. Releasing the trigger/PTC button will stop the megaphone. The PTC button can slide up to permanently switch on so you do not have to hold the button in.
2. The P637D can be used as a siren, to do so push the Talk/Siren switch to Siren. The Siren will operate at maximum volume from the start and the volume control has no affect. Take extra care not to point the megaphone at any person closer than 3.5m (10ft). To turn the siren OFF slide the switch back to the TALK

DISPOSAL AND RECYCLING

You must not dispose of this unit with domestic household waste.

Most local authorities have specific collection system for electrical items and disposal is free of charge to the end-user.

TECHNICAL SPECIFICATION

Dimensions (Folded):320×230×380 mm
Weight: (Inc. Batteries)..... 1.75 kg
(Exc. Batteries)..... 1.2 kg
Batteries: (Not Supplied) 8 x C Cell 1.5 V
Effective Distance (depending on conditions).....up to 1500m

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Electrovision Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX
www.electrovision.co.uk