



## INSTRUCTION MANUAL

### I. Technical Specifications:

Item Code:	SRL-328S(G017HE)
Name:	MINI COLOR FLOW
Volt:	230V~50HZ 60VA
Bulb:	240V 30W/50W
Color:	RED, BLUE, GREEN, WHITE
Weight:	1.7kg
Size:	L150XW185XH160 mm

### II. Operational Instructions:

1. Unpack the carton to check if there is any damaged or missing parts when you receive the unit, call the local dealer if anything is found not in a normal condition.
2. Open the lid to install lamp. Keep the lamp untouched by hand and disconnect the unit from power while Re-lamping.
3. Use a clamp to hang the unit onto the truss fasten tight. Tie the unit steadily onto the truss by winding a chain through the bracket of the unit.
4. Place the unit where there is efficient ventilation, away from any flammable and explosive objects.
5. Check that the rated power corresponds to the main supply.

### III. Re-lamping:

1. Disconnect from power supply and cool down the unit before re-lamping.
2. Open the lid and replace the burnt-out lamp.
3. Restore the lid.

### IV. Caution:

1. In order to reach a maximum of safety the following points should be carefully read and observed.
2. Ambient temperature should not exceed 35°C.
3. Disconnect from the power supply before opening or replacement of the lamp and fuse. Please be sure the lamp is cool before replacement!
4. To avoid electrical shock, do not touch any live parts when the unit is activated.
5. Call professionals for maintenance, no spare parts are included with the unit.
6. The lamp should be changed if it has become damaged or thermally deformed.
7. Please ask an approved electrician because of special national requirements for Electro installation. No operation without proof by skilled electrician in public areas!
8. Do not cover the lamp!
9. Alternative precautions to switch off the device shall be taken if it is not easy to reach the mains socket