

VICOSA LIGHTING SET

A set of 4 mini flower effects that can be linked together to produce a cascade of vibrant coloured beams.

Each set contains a master units, three slave units, a remote on/off switch with lead and three separate XLR leads (2 x 1 metre, 1 x 2metres).

OPERATION

- 1. Unpack the carton and check for any damaged or missing parts, contact your dealer if anything is missing or damaged.*
- 2. Open lamp access cover on top of unit and fit lamp securely into lamp holder, re fix lamp cover. Take care not to touch lamp with bare hands and if you do then clean lamp with alcohol and soft cloth. Before fitting lamp make sure the unit is isolated from any AC power source and the unit is cool.*
- 3. Attach the mounting brackets to the units and fix securely in required location, please note secondary hanging point for fixing safety chains.*
- 4. Situate the units where there is adequate ventilation and away from any flammable materials or sources of moisture.*
- 5. Connect units to suitable AC power source.*
- 6. For optimal performance and longer life it is recommended you cycle the use of the units so as to cool them down.*

FUNCTIONS

- 1. The system comprises one master and three slave units. The master can work stand alone but the slaves need to be connected to the master to operate.*
- 2. A remote on/off switch is connected to the master unit by a 4 metre XLR lead each slave unit is then connected to the master unit by the enclosed XLR leads.*
- 3. When the remote switch is on the master and slaves(if connected) will react to sound (sound activated).*
- 4. If when the remote switch is on there is no sound for ten minutes then the system will turn off and go in to protection mode. The system will automatically turn on again when it receives a sound input.*
- 5. Please note the master has a microphone which picks up ambient sound.*

SAFETY

- 1. To avoid electric shock do not touch any live parts when the unit is activated.*
- 2. Disconnect from mains supply and wait to cool down before changing lamps or fuse.*
- 3. Only qualified service personnel should service or repair the unit.*
- 4. Ambient temperature should not exceed 35°C.*
- 5. Do not block fans or exhaust vents.*
- 6. For installation in public places consult an approved electrician.*
- 7. These unit must be earthed. \perp*
- 8. Indoor use only.*
- 9. Do not stare into the beams.*

TECHNICAL DATA

Per master unit or each slave

Power.....230VAC 50Hz 350VA


Lamps.....230V 300W CP97 G016ZD

t_a Max.....35 °C

Fuse.....F3.15A 20 x 5mm

Weight.....3.5kgs

Dimensions.....300 x 290 x 200mm

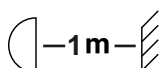

Do not use near combustibles



This unit must be earthed



Warning: Hot lamp, Hot surfaces



Disconnect supply before removing cover or changing lamps



Indoor use only