

EAGLE ®

P637B

Megaphone



**20W Indoor / Outdoor Megaphone
Talk / Siren Functions
Adjustable Volume
Pistol Grip Control**

IMPORTANT

Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

Inspect the product for signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- Splash proof only, do not submerge in water.
- Use only the correctly rated and type of battery.
- DO NOT mix new and used batteries as this will affect the battery life.
- Observe correct polarity when fitting batteries.
- DO NOT point directly at any person who is closer than 3.5m (10ft) from the megaphone and always adjust the volume to the conditions.

FITTING BATTERIES


To fit the batteries first release the battery compartment by pushing the catch in at the rear of the handle and open cover.



Insert 8 x AA type batteries into the carrier, observing the correct polarity, then return the carrier to the megaphone aligning the + ve and - ve terminals of the carrier with the terminals in the megaphone.

Replace the cover and securely push till the button clicks

OPERATION

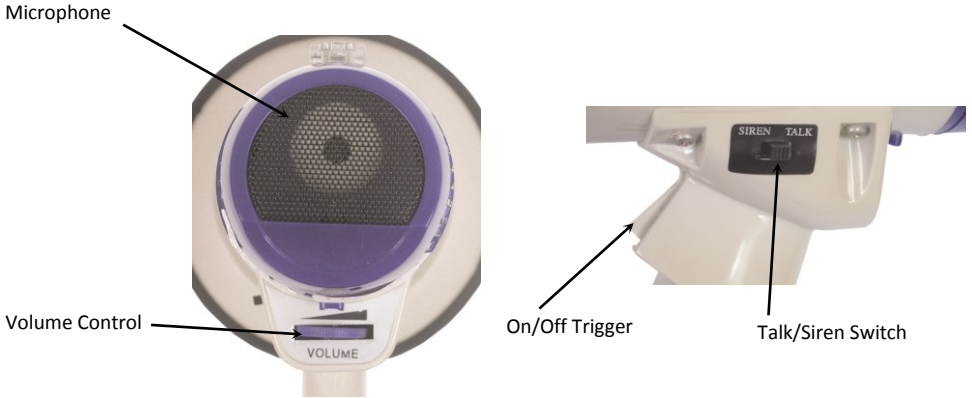

The P637B megaphone can be used as a megaphone or Siren, before use turn the volume to its minimum position and increase as necessary. Never start with the volume at the max level;

1. To use as a conventional megaphone push the slide control on the side to the Talk position. Hold the megaphone by the grip and pull the ON/OFF trigger. You can now talk, adjust the volume as necessary. Releasing the trigger will stop the megaphone.
2. The P637B can be used as a siren, to do so push the Talk/Siren switch to Siren. The Siren will operate at maximum volume from the start and the volume control has no affect. Take extra care not to point the megaphone at any person closer than 3.5m (10ft). Hold the megaphone by the grip and pull the ON/OFF trigger to start the siren. Release the trigger to stop.

DISPOSAL AND RECYCLING

You must not dispose of this unit with domestic household waste.

Most local authorities have specific collection system for electrical items and disposal is free of charge to the end-user.

TECHNICAL SPECIFICATION

Dimensions (Folded):320×200×340 mm
Weight: (Inc. Batteries)..... 1.2 kg
(Exc. Batteries)..... 1.05 kg
Batteries: (Not Supplied) 8 x AA Cell 1.5 V
Effective Distance (depending on conditions).....up to 800m

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Electrovision Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX
www.electrovision.co.uk